

6.1.1 Setting the Clock

In the navigation bar of the web-based management click on the "Clock" link to open the HTML page for the clock configuration.

Enter the current time and date in the fields "Time on device" and "Date".

Click on the "SUBMIT" button to set the clock of the controller.



Note

When adjusting daylight saving time/standard time, make sure to select the correct time zone and either daylight saving time or standard time.

Clock configuration	
Configuration Data	
Time on device	01:59:00
Date (YYYY-MM-DD)	2007-03-25
Timezone (+/- hour)	1
Summer time	<input type="checkbox"/>
12 hour clock	<input type="checkbox"/>
<input type="button" value="UNDO"/> <input type="button" value="SUBMIT"/>	

Fig. 7: Configuration window for the clock

6.1.2 Selecting the (S)NTP Server

In the navigation bar of the web-based management click on the "TCP/IP" link to open the HTML page for the IP configuration.

Enter the IP address of the time server in the field "(S)NTP Server".

The "SNTP Update Time" specifies the time intervals between the synchronization cycles of the real time clock (in seconds).

Configuration Data	
IP-Address	10.1.29.245
Subnet Mask	255.255.0.0
Gateway	0.0.0.0
Hostname	
Domain name	
DNS-Server1	0.0.0.0
DNS-Server2	0.0.0.0
(S)NTP-Server	10.1.1.1
SNTP Update Time (sec., max: 65535)	3600

Fig. 8: Selecting the (S)NTP Server + time update